

UL01 Solar LED Flood Light







- 30W 50W 100W 200W 300W 500W
- Lumileds/Bridgelux Chips




Features & Advantages





- (1) -ADC#12 Aluminum housing.
- ② -LiFeP04 Battery (replaceable): 5000mAh/pc.
- ③ -Bridgelux chip (low voltage (2.6-2.8.V) high lumens).
- 4 -2x1.5mm² Cable (Thicker Cable Faster Charging).
- ⑤ -Battery replaceable.

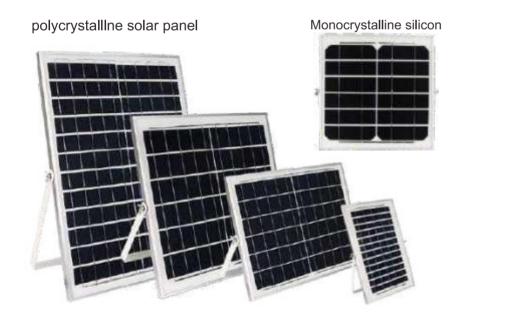



Solar panel:


Monocrystalline silicon and polycrystalline silicon for options. Polycrystalline silicon energy conversion up to 17.5% Good performance on the rainy days.





Specifications

Product Model	UL01-30W	UL01-60W	UL01-100W	UL01-150W
Power	30W	60W	100W	150W
Lumen/LED Type	360LM	720LM	1400LM	2160LM
Size of Lamp(LxWxH)	194x167x35mm	219x190x45mm	260x228x45mm	314x274x45mm
Battery	3.7V/5000mAh	3.2V/10000mAh	3.2V/20000mAh	3.2V/30000mAh
Solar Panel	8W	15W	20W	25W
Size of Panel(LxWxH)	350x210x17mm	350x350x17mm	350x400x17mm	350x535x25mm
Beam angle	120° / 90°			
IP Class	IP65			
Color Temperature	3000K/4000K/6000K			
Housing Color	Gray			
Housing Material	Aluminum			
Working Temp	-20°C~+50°C			
Storage Temp	-20°C~+50°C			
Charging Time & Working Time	Auto Working Mode: Fully charged, can work for 10 hours and 7 rainy day backup			
Installation Height	3-4 Meters	4-5 Meters	5-6 Meters	6-8 Meters
Warranty	3years (Battery 2years warranty)			

Product Dimension

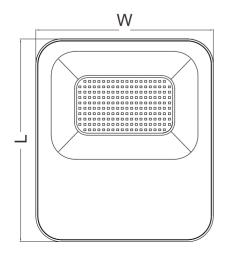

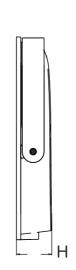

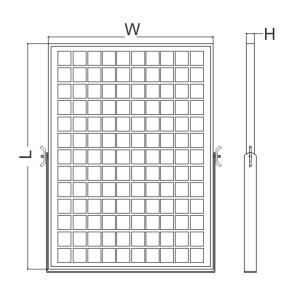


Page 3/6




Installation C---Wall Mounted


1-Fix the solar panel to the wall

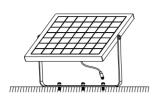

2-Fix the bracket of the lamp on the wall

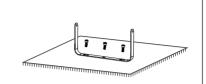

3-Fix the lamp bady to the bracket.

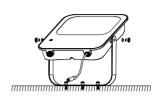


4-Adjust the angle which you need.






5-Connect the wire of the solar panel to the wire of the lamp.

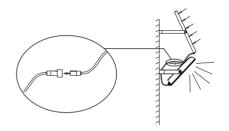

Remote control introduction

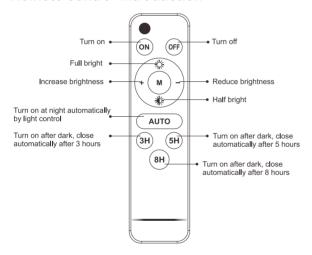


Quick Setup Procedure



- 1. Please keep it away from the children.
- 2. This product can installed for outdoor, but we suggest that against for the rain/storm & High lights.

Note : Please bring the following tools

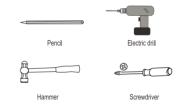

Important Safety Information


- Do not dispose of battery in fire. This may result in an explosion.
- Do not expose the light to fire or intense heat as the battery may explode.
- Do not immerse in water.
- Never look directly into the light or shine it into another person's eyes.
- Follow proper safety tips to prevent from falling off a ladder.
- Consult your local construction safty guide if needed for installing the light fixture on a building.


Fixing instructions

- The light fixture should be installed on a flat and stable surface.
- Avoid installing the light near an air conditioner, a central heater, or high voltage system.
- The solar charger board should be set in a sunny area where maximum sunlight can be collected. Typically, the solar board should face a direction (south) where sunlight can charge the board for at least 3 hours per day (5 hours per day if behind glass). It is suggested to charge the light for 24 hours before first use.
- Use a soft wet cloth to periodically (at least once a year) clean the charger board to avoid the reduction of power output due to accumulated dust.



LUMINOUS INTENSITY DISTRIBUTION DIAGRAM

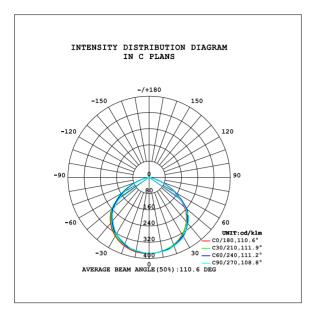

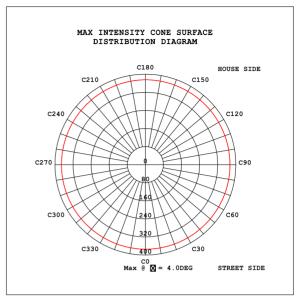

Package











Applications



Warning & Reminding

- 1. Before install the lamp on the pole or connect the DC connectors, please press on/off button on the lamp firstly to activate lamp and remote control.
- 2. To deactivate the lamp and remote control, please press the on/off button on the lamp, it will totally turn off. In this case, the solar panel can not get charged at day time.
- 3. If you turn off the lamp with the remote control, the lamp will flash 3 times then off. In this case, the solar panel can get energy at day time.
- 4. The lamp is equipped with an internal battery pack, which is replaceable. If any need, please contact seller for correct new battery pack.
- 5. How to replace battery?
 - Please press on/off button on the lamp to turn it off firstly, then take out the battery and replace with new ones, after which please press on/off button on the lamp again and toward the solar panel to sunshine or a strong light to activate the lamp and remote control.
- 6. As this lamp is photosensitive, it will automatically light up at dusk.

 Please be aware that it will not light up during day time even it's turned on.
- 7. The working modes are with memory function.
- 8. Build-in intelligent IC with over-charge, over-discharge, over-temperature protection.
- 9. Please do not dispose the battery with household garbage to avoid explosion.
- 10. Non-professionals please do not disassemble the lamp.